

(200A BMS)

PRODUCT # MANUAL

Lithium Iron Phosphate Battery (LiFePO₄)

PRODUCT OVERVIEW

12.8V 300AH BATTERY

Operating Voltage: 12.8V

Charging Voltage: 14.4±0.2V

Recommend Charge Current: 60A (0.2C)

Max Continuous Discharge Current: 200A

Max. Continuous Output Power: 2560W



20.55"[522mm]

ADDITIONAL COMPONENTS

M8- 5/8" [16MM] TERMINAL BOLTS

Recommended terminal torque: 106.2 to 123.9 inch·lbs / 12 to 14 N·m.

The terminal bolts are used to secure multiple cable lugs to a single battery terminal. The bolts can be replaced with M8 bolts of other lengths based on actual needs.



INSULATING CAPS FOR BOLTS

Cover the battery with the insulating caps after tightening the bolts. If the cap melts, stop using the battery and reach out to service@litime.com for further analysis.

BATTERY PARAMETERS

Cell Type	LiFePO4
Nominal Voltage	12.8V
Rated Capacity	300Ah
Energy	3840Wh
Internal Resistance	≤40mΩ
Cycle Life	≥4000 times
Battery Management System (BMS) Board	200A
Charge Method	CC/CV
Charge Voltage	14.4±0.2V
Recommended Charge Current	60A (0.2C)
Max. Continuous Charge Current	200A
Max. Continuous Discharge Current	200A
Surge Discharge Current	800A@1 second
Max. Continuous Output Power	2560W

Dimension	L20.55*W9.33*H8.58 inch
	L522*W237*H218 mm
Housing Material	ABS
Recommended Terminal Torque	106.2 to 123.9inch · lbs/12 to14N · m
Rrotection class	IP65
Temperature Range	Charge: 0°C to 50°C / 32°F to 122°F
	Discharge: -20°C to 60°C / -4°F to 140°F
	Storage: -10°C to 50°C / 14°F to 122°F


HOW TO ESTIMATE THE BATTERY CAPACITY

STATE OF CHARGE (SOC)

The battery capacity could be roughly estimated by its <u>resting voltage</u> (not charging/discharging voltage). (1)

Since the voltage of each battery is slightly different, and the voltage measurement is affected by the measuring instrument, ambient temperature, etc., <u>the following parameters are for reference only</u>. The actual SOC of the battery is based on the discharge capacity under load.

<u>Resting Voltage:</u> The voltage is measured after the battery has been disconnected from the charger and loads with zero current, and left alone for 3 hours.

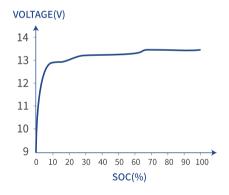

SOC (%)	VOLTAGE (V)
0	10 to 12
25	13 to 13.15
50	13.15 to 13.2
75	13.3 to 13.33
100	≥13.33

① Based on the characteristics of LiFePO4 batteries, the voltage measured by all LiFePO4 batteries during charging/discharging is not the real voltage of the battery. Therefore, after charging/discharging and disconnecting the battery from the power source, the voltage of the battery will gradually drop/increase to its real voltage.

SERIES / PARALLEL CONNECTION

THE PREMISE OF CONNECTION


<u>To connect in series or /and parallel, batteries should meet the below conditions:</u>

- a. identical batteries with the same battery capacity (Ah) and BMS (A);
- b. from the same brand (as lithium battery from different brands has their special BMS);
- c. purchased in near time (within one month).

LIMITATION FOR SERIES/PARALLEL CONNECTION

Support connecting up to 16 identical batteries for up to:

- 4 in series as 48V (51.2V) battery system/
- 4 in parallel as 1200Ah battery system.

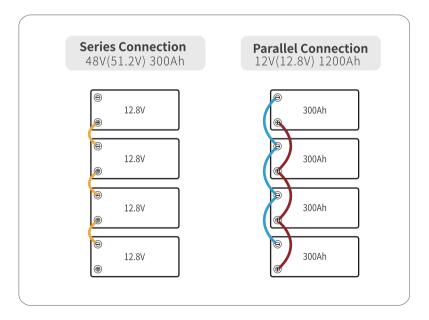

WHAT TO DO WHEN THE

BATTERY STOPS WORKING?

Can't work

When the battery

or

Can't be charged

or

 
Voltage < 9V

It has 85% chances that BMS has shut it off for protection, and you could try one of below ways to activate the battery.

GENERAL STEPS

Step

If the BMS has cut off the battery for protection, follow the below steps to activate it.



If the battery is unable to recover itself after the above steps, please try activating by **ONE OF BELOW TWO METHODS.**

After being activated (voltage > 10V) and fully charged by the normal charging method, it can be used normally.

Method 1

Use a <u>charger with lithium battery activation function</u> to fully charge the battery.

Method ②

Connect <u>a controller</u> that supports 12V LiFePO₄ battery charging to charge the battery for 3~10s in sunny daytime.

