

(250A BMS)

# PRODUCT # MANUAL

Lithium Iron Phosphate (LiFePO<sub>4</sub>)Battery

### PRODUCT OVERVIEW

#### **12.8V 460AH BATTERY**


Operating Voltage: 12.8V

Charging Voltage: 14.4±0.2V

Recommended Charge Current: 92A (0.2C)

Max Continuous Discharge Current: 250A

Max. Continuous Output Power: 3200W

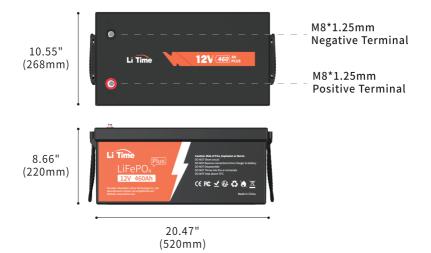

### ADDITIONAL COMPONENTS

### M8-5/8" (16MM) TERMINAL BOLTS

Recommended terminal torque: 106.2 to 123.9 inch·lbs/12 to 14 N·m

The terminal bolts are used to secure multiple cable lugs to a single battery terminal. The bolts can be replaced with M8 bolts of other lengths based on actual needs.



#### INSULATING CAPS FOR BOLTS

Cover the battery with the insulating caps after tightening the bolts. If the cap melts, stop using the battery and reach out to **service@litime.com** for further analysis.

# BATTERY PARAMETERS

Item	Parameter
Cell Type	LiFePO <sub>4</sub>
Nominal Voltage	12.8V
Rated Capacity	460Ah
Energy	5888Wh
Internal Resistance	≤40mΩ
Cycle Life	≥4000 times
Battery Management System (BMS) Board	250A
Charge Method	CC/CV
Charge Voltage	14.4±0.2V
Recommended Charge Current	92A (0.2C)
Max. Continuous Charge Current	250A
Max. Continuous Discharge Current	250A
Surge Discharge Current	1000A@1 second
Max. Continuous Output Power	3200W

Dimension	L 20.47* W 10.59 * H 8.66 inch
	L 520 * W 269 * H 220 mm
Housing Material	ABS
Recommended Terminal Torque	106.2 to 123.9inch · lbs/12 to14N · m
Rrotection class	IP65
Temperature Range	Charge: 0°C to 50°C / 32°F to 122°F
	Discharge: -20°C to 60°C / -4°F to 140°F
	Storage: -10°C to 50°C / 14°F to 122°F




## HOW TO ESTIMATE THE BATTERY CAPACITY

### STATE OF CHARGE (SOC)

The battery capacity could be roughly estimated by its <u>resting voltage</u> (not charging/discharging voltage). (1)

Since the voltage of each battery is slightly different, and the voltage measurement is affected by the measuring instrument, ambient temperature, etc., <u>the following parameters are for reference only</u>. The actual SOC of the battery is based on the discharge capacity under load.

<u>Resting Voltage:</u> The voltage is measured after the battery has been disconnected from the charger and loads with zero current, and left alone for 3 hours.

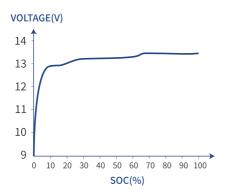

SOC (%)	VOLTAGE (V)
0	10 to 12
25	13 to 13.15
50	13.15 to 13.2
75	13.3 to 13.33
100	≥13.33

① Based on the characteristics of LiFePO4 batteries, the voltage measured by all LiFePO4 batteries during charging/discharging is not the real voltage of the battery. Therefore, after charging/discharging and disconnecting the battery from the power source, the voltage of the battery will gradually drop/increase to its real voltage.

# SERIES / PARALLEL CONNECTION

### THE PREMISE OF CONNECTION

<u>To connect in series or /and parallel, batteries should meet the below conditions:</u>

- a. identical batteries with the same battery capacity (Ah) and BMS (A);
- b. from the same brand (as lithium battery from different brands has their special BMS);
- c. purchased in near time (within one month).

### LIMITATION FOR SERIES/PARALLEL CONNECTION

Support connecting up to 16 identical batteries for up to:

- 4 in series as 48V (51.2V) battery system/
- 4 in parallel as 1840Ah battery system.



### WHAT TO DO WHEN THE

### **BATTERY STOPS WORKING?**

When the battery



or



or



It has 85% chances that BMS has shut it off for protection, and you could try one of **below ways** to activate the battery.

#### GENERAL STEPS

If the BMS has cut off the battery for protection, follow the below steps to activate it.



Cut off all the connections from the battery

Step 2

### Leave the battery aside for 30mins

Then the battery will automatically recover itself to normal voltage (>10V) and can be used after fully charged.

If the battery is unable to recover itself after the above steps, please try activating by **ONE OF BELOW TWO METHODS.** 

After activated (voltage > 10V) and fully charged by the normal charging method, it can be used normally.

### Method 1

Use a <u>charger with lithium battery activation function</u> to fully charge the battery.

### Method 2

Connect a controller that supports 12V LiFePO<sub>4</sub> battery charging to charge the battery for 3~10s in sunny daytime.

